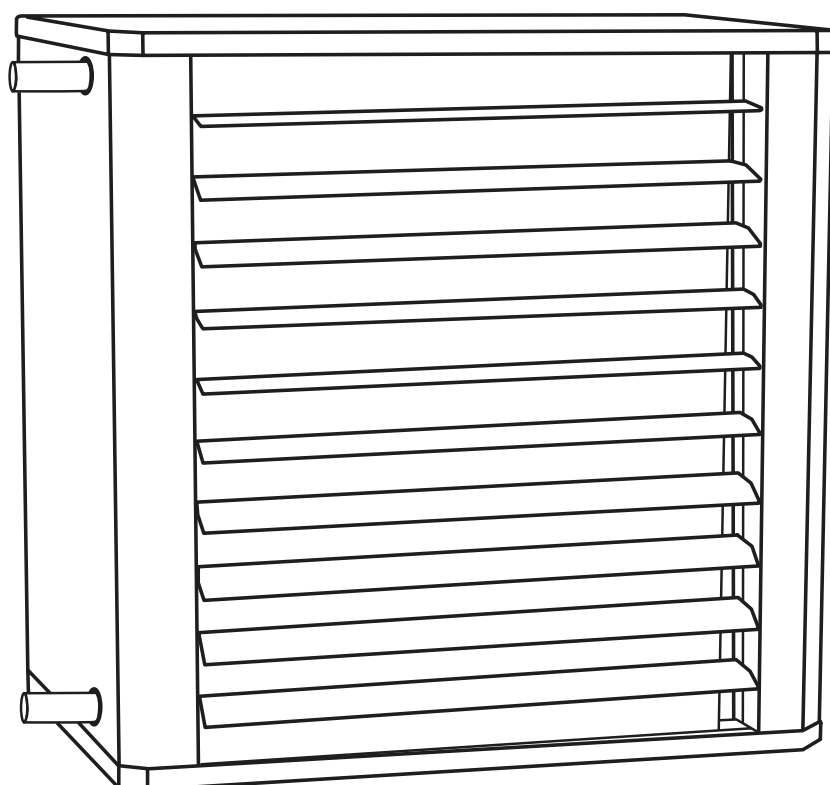


Original instructions

SWX CE

SE ... 7

GB ... 12

NO ... 17

DE ... 22

ES ... 27

FR ... 32


IT ... 37

NL ... 42

PL ... 47


RU ... 52

SWX CE

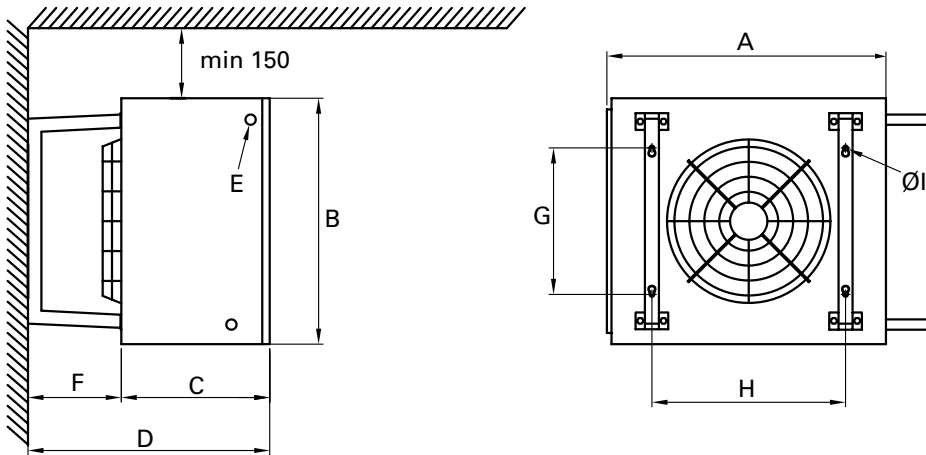


[mm]	A	B	C	D	E	F	G	H	ØI
SWXCE12	550	530	380	630	R3/4"	250	330	410	10
SWXCE22	705	655	430	700	R1"	270	420	505	10

Electrical installation 230V~

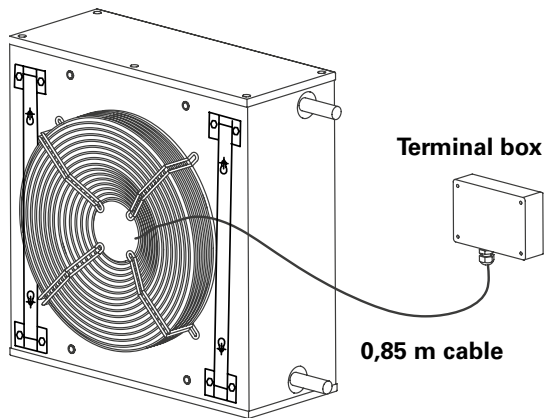

Accessories


Type		HxWxD [mm]
SWXHFT1	SWXCE12	455x525x15
SWXHFT2	SWXCE22	595x650x15

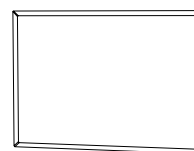

SWXHFT

Controls SWX CE


Type	RSK-nr (SE)	NRF-nr (NO)	HxWxD [mm]
SWXRT35			175x150x100

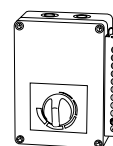

SWXRT35


Water regulation SWX CE

Type	RSK-nr (SE)	NRF-nr (NO)
SD20*	672 70 37	85 021 57
TVV20*	672 70 35	85 021 47
TVV25*	672 70 36	85 021 48

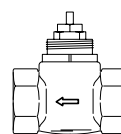

TVV20/25

+

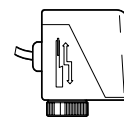


SD20

*) Note: Only for mounting outside corrosive environment.


Wiring diagrams SWX CE

Internal

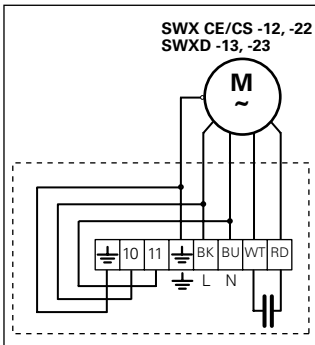

SWX CE

Control by thermostat only

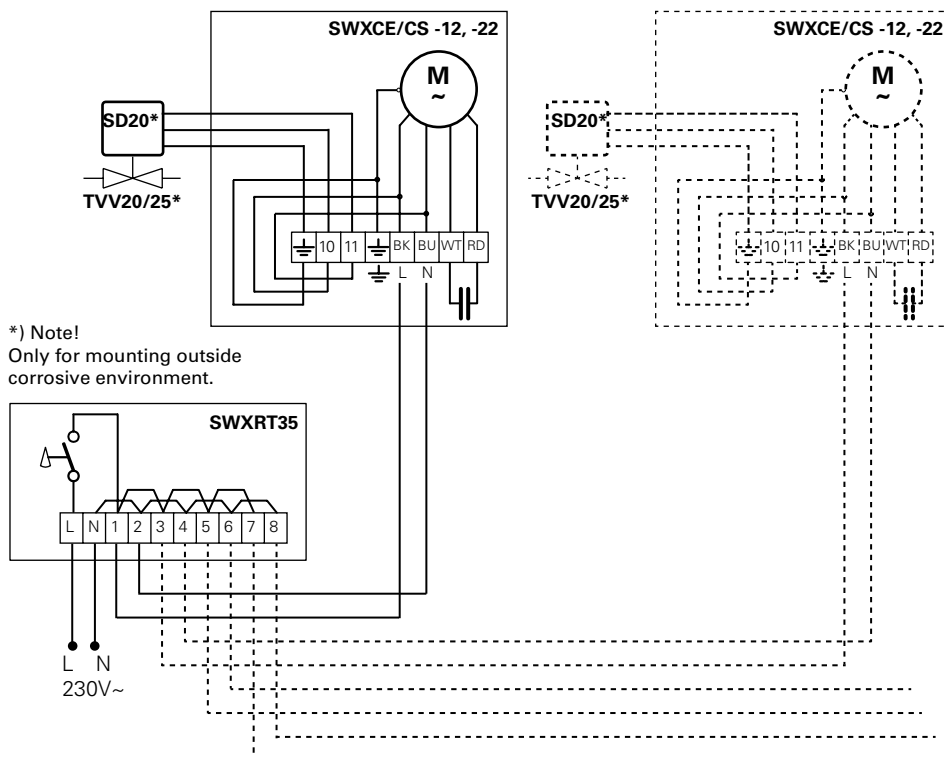

SWX CE

SWX CE

Typ	Heat output* ¹ [kW]	Airflow [m ³ /h]	Airflow [m ³ /s]	Sound level* ² [dB(A)]	Δt * ^{1,3} [°C]	Air throw [m]	Water volume* ⁴ [l]	Voltage [V]	Amperage [A]	Weight [kg]
SWXCE12	12	2100	0,7	59	17	7	1,7	230V~	0,5	29
SWXCE22	24	4200	1,2	69	17	10	2,8	230V~	1,35	45

*¹) Applicable at water temperature 60/40 °C, air temperature, in +15 °C.

*²) Conditions: Distance to the unit 5 metres.

*³) Δt = temperature rise of passing air at maximum heat output.

*⁴) Water volume inside battery.

Intended for water temperatures up to +150 °C and 16 bar.

Max. surrounding temperature +70 °C.

Protection class: IP65.

CE compliant.

GB: Heat output

SE: Värmeeffekt
NO: Varmeeffekt
FR: Puissance
RU: Выходная мощность
DE: Heizleistung
PL: Moc grzewcza
ES: Potencia calorífica
IT: Potenza
NL: Verwarmingscapaciteit

GB: Air throw

SE: Kastlängd
NO: Kastelengder
FR: Portée
RU: Длина струи
DE: Wurfweite
PL: Zasięg strumienia powietrza
ES: Distribución
IT: Lancio
NL: Luchtworp

GB: Amperage

SE: Ström
NO: Strøm
FR: Intensité
RU: Сила тока
DE: Stromstärke
PL: Natężenie
ES: Intensidad
IT: Corrente motore
NL: Stroom-sterkte

GB: Airflow

SE: Luftflöde
NO: Luftmengde
FR: Débit d'air
RU: Расход воздуха
DE: Volumenstrom
PL: Wydajność powietrza
ES: Caudal de aire
IT: Portata aria
NL: Luchtstroom

GB: Water volume

SE: Vattenvolym
NO: Vannvolum
FR: Volume d'eau
RU: Объем воды
DE: Wasser-menge
PL: Objętość
ES: Volumen de agua
IT: Volume acqua
NL: Water volume

GB: Weight

SE: Vikt
NO: Vekt
FR: Poids
RU: Вес
DE: Gewicht
PL: Waga
ES: Peso
IT: Peso
NL: Gewicht

GB: Sound level

SE: Ljudnivå
NO: Lydnivå
FR: Niveau sonore
RU: Уровень шума
DE: Geräuschpegel
PL: Poziom głośności
ES: Nivel de ruido
IT: Livello sonoro
NL: Geluidsniveau

GB: Voltage

SE: Spänning
NO: Spenning
FR: Tension
RU: Напряжение
DE: Spannung
PL: Napięcie
ES: Tensión
IT: Tensione motore
NL: Voltage

Output charts water

SWX CE

Incoming / outgoing water temperature 90/70 °C

Type	Airflow [m³/h]	Air temp. in = +5 °C				Air temp. in = +15 °C			
		Output [kW]	Air temp. out [°C]	Water flow [l/s]	Pressure drop [kPa]	Output [kW]	Air temp. out [°C]	Water flow [l/s]	Pressure drop [kPa]
SWXCE12	2100	29,5	45,2	0,37	11,9	24,8	50,1	0,31	8,6
SWXCE22	4200	56,6	43,6	0,70	30,3	47,7	48,8	0,59	22

Incoming / outgoing water temperature 80/60 °C

Type	Airflow [m³/h]	Air temp. in = +5 °C				Air temp. in = +15 °C			
		Output [kW]	Air temp. out [°C]	Water flow [l/s]	Pressure drop [kPa]	Output [kW]	Air temp. out [°C]	Water flow [l/s]	Pressure drop [kPa]
SWXCE12	2100	25,2	39,4	0,31	9,0	20,6	44,2	0,26	6,1
SWXCE22	4200	48,5	38,1	0,60	23,1	39,8	43,2	0,49	15,9

Incoming / outgoing water temperature 60/40 °C

Type	Airflow [m³/h]	Air temp. in = +5 °C				Air temp. in = +15 °C			
		Output [kW]	Air temp. out [°C]	Water flow [l/s]	Pressure drop [kPa]	Output [kW]	Air temp. out [°C]	Water flow [l/s]	Pressure drop [kPa]
SWXCE12	2100	16,4	27,4	0,20	4,2	11,9	31,9	0,15	2,3
SWXCE22	4200	32,2	26,9	0,40	11,2	23,7	31,8	0,29	6,4

Installation and operating instructions

General Instructions

Read these instructions carefully before installation and use. Keep this manual for future reference.

The product may only be used as set out in the assembly and operating instructions. The guarantee is only valid if the product is used in the manner intended and in accordance with the instructions.

Application

SWX is a range of fan heaters suitable for environments with strict demands on materials and safety. Models are available for use in dusty or corrosive environments. Fan heater SWX has a robust design, adapted to the requirements of harsh environments.

Supplied with air director with individually adjustable louvres that direct the air flow on one plane.

SWX CE has an inspection hatch with quick release.

Protection class: IP65.

SWX CE

The fan heater is available in two sizes, SWXCE12 and SWXCE22. They have been adapted specifically for use in corrosive environments, such as offshore or chemical industry.


- Meets the requirements for corrosion class C5-M.
- Uses hot water as the energy medium.
- Casing, air deflector grille and brackets made of acid-proof stainless steel, EN 1.4404.
- Water coil with copper tube and aluminium fins coated with ElectroFin E-coat. This means that the entire coil is dip-coated with flexible epoxy polymer with 100% coverage. Thermal loss less than 1%.
- Protection class IP65 – protected against dust and water jets.
- Inspection hatch with quick release.
- Fitted with draining plugs for removing dirty water after spraying.
- Supplied without any automation and a single fan speed.
- Wall brackets supplied for mounting of the fan heater on the wall for a horizontal air stream, or in the ceiling for a vertical air stream.

Tip for installation

Leave the protective patch until the installation is complete or use gloves that do not imprint on the stainless steel plate.

Fitting the wall brackets

1. Remove the eight screws indicated by the arrows in picture A.

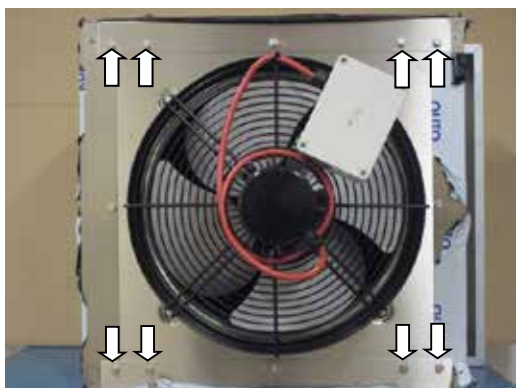

A

2. Install the brackets with the holes toward the fan motor, as shown in picture B.



B

3. The fan heater is fitted with a transport protection that is attached to the top and bottom. Loosen the four screws that have the Torx 20 head as shown in Figure C and remove the transport guard. Replace the screws, see figure D.

C



D



4. The fan heater may be mounted with the connection pipes facing left or right, as seen from the front. In rooms with high ceilings, the fan heater should be installed in a low position, but not so low that it intrudes on the working space. Make sure that the wall is able to support the weight of the fan heater.

5. The fan heaters are delivered with the air deflector installed for water connection on the left hand side. If the fan heater is mounted with the pipes facing right, the air deflector must be turned for the air to be deflected downward. Remove the six screws (Torx 20) attaching the air deflector as shown in picture E, lift out the air deflector and turn it 180°. Then reattach it.

E



6. Mount the fan heater as shown in photo F when mounting it on the ceiling for a vertical air stream. The minimum distance to the wall should be 700 mm. If the fan heater is mounted on a ceiling, near a corner, the minimum distance to one of the walls should be 700 mm and to the other 1000 mm. Make sure that the ceiling is able to support the weight of the fan heater.

F




Connection of heating coil

The installation must be carried out by an authorised installer.

1. The fan heater must not be connected to the hot mains water or steam. The maximum permissible temperature and pressure are indicated on the fan heater type plate at the connection pipes.
 2. Capacity, water temperature, flow and pressure drop can be found in the table for the respective size.
 3. The fan heater must be connected so that the coil can drain water during shutdown when there is a freezing hazard.
 4. At the outlet of the fan heater or centrally in the installation, a venting valve is installed.
 5. A connected pipe system to the fan heater must be set so that they do not load the inlet and outlet pipes of the fan heater.
 6. The water inlet is connected to the heater's lowest placed pipe and the outlet at the highest position according to the arrows in Figure G. The connection is R3/4" on SWXCE12 and R1" on the SWXCE22.
 7. When tightening the couplings on the connection nipples, these must be held so that no torque is transferred to the fan heater's inlet and outlet pipes, see figure H.
- Important! Make sure the entire system is close to the water connection. Any potential leakage can cause expensive water damage.**
8. The connection of brass to the coil should be protected against corrosion in aggressive environments, for example with vulcanic tape that can withstand the surrounding environment, see figure I.

G

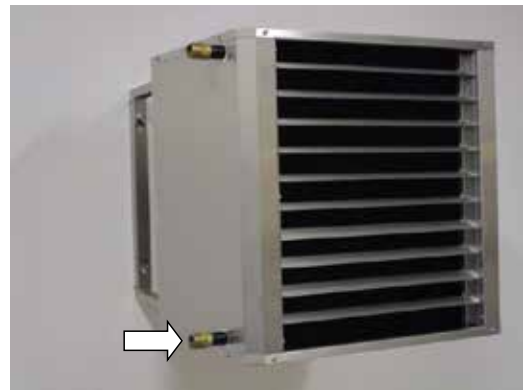

H



I



Electrical installation

The electrical installation should be carried out by a qualified electrician in conformity with prevailing regulations. The appliance should be supplied via a triple-pole switch with at least 3 mm breaking gap.

The fan motor is connected to a detached terminal box, which is mounted on a wall next to the unit (0,85 m cable).

The cable glands used must meet the protection class requirements.

See wiring diagrams.

Maintenance

To ensure performance and reliability of the unit, inspection and cleaning should be carried out regularly. Inspection should be carried out at least twice a year. Clean the unit when needed.

During inspection the power supply must always be disconnected.

The fan heater is equipped with inspection hatches with quick-release locks. Open the quick-release locks according to picture J.

J



Cleaning

The interval between each cleaning depends on the environment the fan heater is used in. Dust on the fan protective grille and on the water coil's aluminum fins impedes the airflow and reduces its heat exchanging performance. The water coil must therefore be kept clean. Use mild detergents that do not affect the surface treatment of the coil. The fan cooling flanges also need to be kept clean, to obtain the lowest possible motor operating temperature.

K



With the inspection hatch (picture K) removed, the water coil's aluminium louvres can be accessed for cleaning as below:

- Blown clean with compressed air or steam.
- Flushed with water. For grease coated louvres add appropriate cleaning detergent.
- Cleaning spray for air conditioners. Follow the instructions supplied with the spray bottle.

Take care not to deform or damage the thin aluminium louvres.

Safety

- *Ensure that the area around the intake is kept free from material which could prevent the air flow through the appliance.*
- *Lifting aids should be used to lift the appliance.*
- *The unit is unpainted and may have sharp metal edges.*
- *When adjusting the louvers, please note that the water heating coil may have sharp edges.*
- *This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.*
- *Children of less than 3 years should be kept away unless continuously supervised.*
- *Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.*
- *Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.*

CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.



Main office

Frico AB
Box 102
SE-433 22 Partille
Sweden

Tel: +46 31 336 86 00

mailbox@frico.se
www.frico.se

**For latest updated information and information
about your local contact: www.frico.se**